

Operating instructions Workabout Pro2

HHT Scanners WorkAbout Pro2

- Scanner Pro2 is named *WORKABOUT PRO* below the screen

Power On/Off:

- Power on: **Enter**
- Power off: **FN, Enter**

Restart:

- Press and hold **FN-Enter-FN** for about 5 sec.

Scanner power up/down:

- Power down: Press F1 - Power up: Press F4

Check battery power:

- Press **FN** and 1

Normal Use:

- Start "Pack and Sea" program
- Login with your username and password
Scanner must be online
- Scan boxes, scan to other customers
The HHT scanner is able to work offline, Data will be delivered automatically when online

Auction scanning:

- *The HHT scanner must be online*

Always leave the terminal logged out

- Program-updates are automatically installed when logging in to the Pack and Sea system.

The "Dot" in the login window indicates:

- **GREEN:** When all data has been send to the server
- **YELLOW:** When data traffic is ongoing
- **RED:** When data can't be delivered to the server

Network management:

Scanner Pro2 uses SCU for network management:

- Create profile
- Change profile

SCU must be used when the scanner indicates "No connection to the server"

In case of network problems - try look into the guide "*Guide PRO2 and PRO3 - Wireless Network Setup WAP2 G2 and G3*"

In case of problems contact:

Bent +4540586083 or Susan +4530115298. Pack and Sea contacts Lyngsoe Systems.