

## Operating instructions Workabout Pro4

### HHT Scanners WorkAbout Pro4

- Scanner Pro4 is named **Workabout Pro4**

### Power On/Off:

- Use the button **Power On/Off**

### Restart:

- Press and hold **FN–Power On/Off** for about 5 sec.

### Scanner power up/down:

- Power down:                      Press F3   - Power up:                      Press F4

### Check battery power:

- Press **FN** and 1

### Normal Use:

- Start "Pack and Sea" program
- Login with your username and password  
*Scanner must be online*
- Scan boxes, scan to other customers  
The HHT scanner is able to work offline, Data will be delivered automatically when online

### Auction scanning:

- *The HHT scanner must be online*

### Always leave the terminal logged out

- Program-updates are automatically installed when logging in to the Pack and Sea system.

### The "Dot" in the login window indicates:

- **GREEN:** When all data has been send to the server
- **YELLOW:** When data traffic is ongoing
- **RED:** When data can't be delivered to the server

### Network management:

Scanner Pro4 uses the program *Fusion* for network management:

- Use "*Find WLANS*" in order to create a profile
  - Use "*Manage profiles*" if you need to make changes in the profile
- Fusion* must be used if the scanner indicates "No connection to the server"

In case of network problems – see the guide "*Guide PRO4 - Setup Wireless Network*"

### In case of problems contact:

Bent +4540586083 or Susan +4530115298. Pack and Sea contacts  
Lyngsoe Systems.