


Setup WIFI - WorkAboutPro Pro2 and Pro3 scanners

Types of scanner




Pro2 scanner

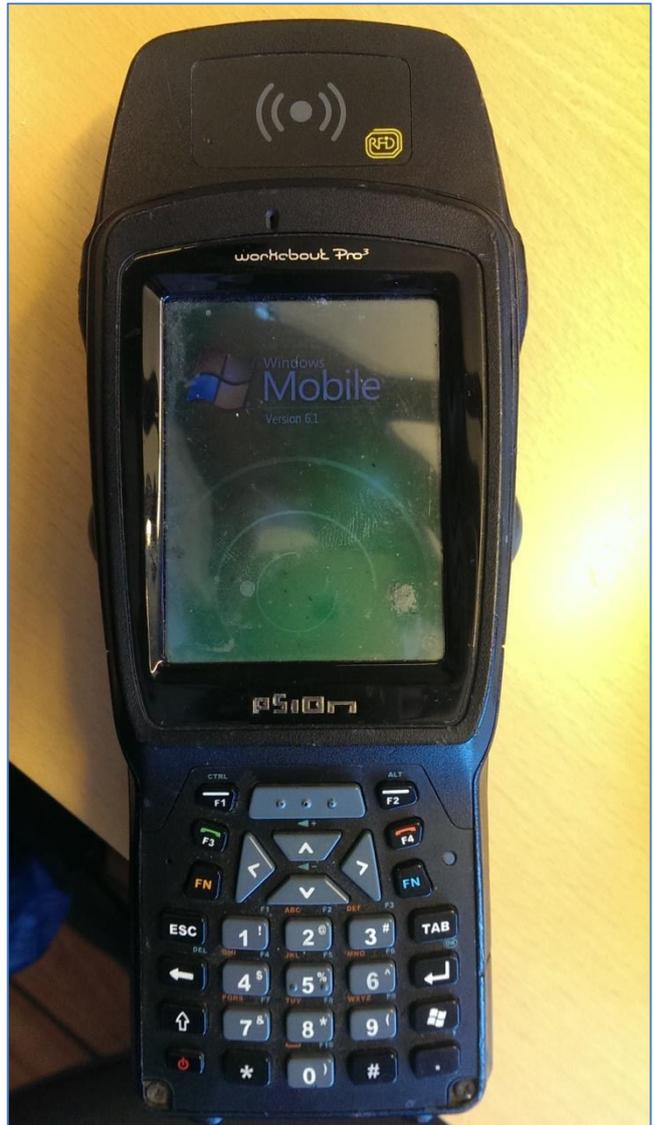


Pro3 scanner


Setup Wifi

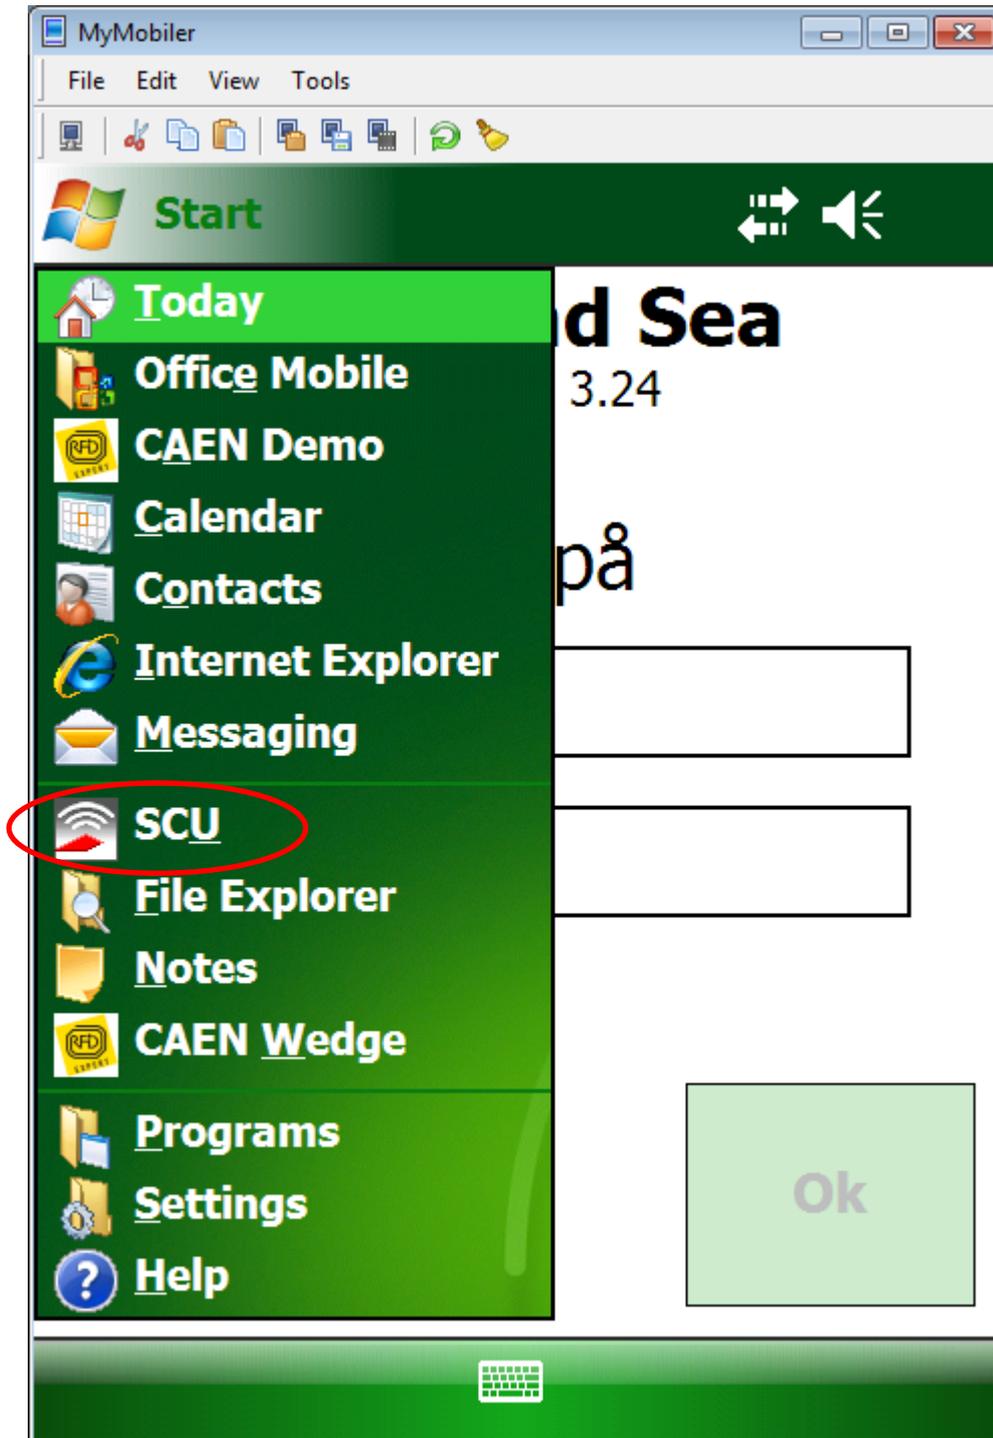


Select **SCU** in the Windows dropdown menu

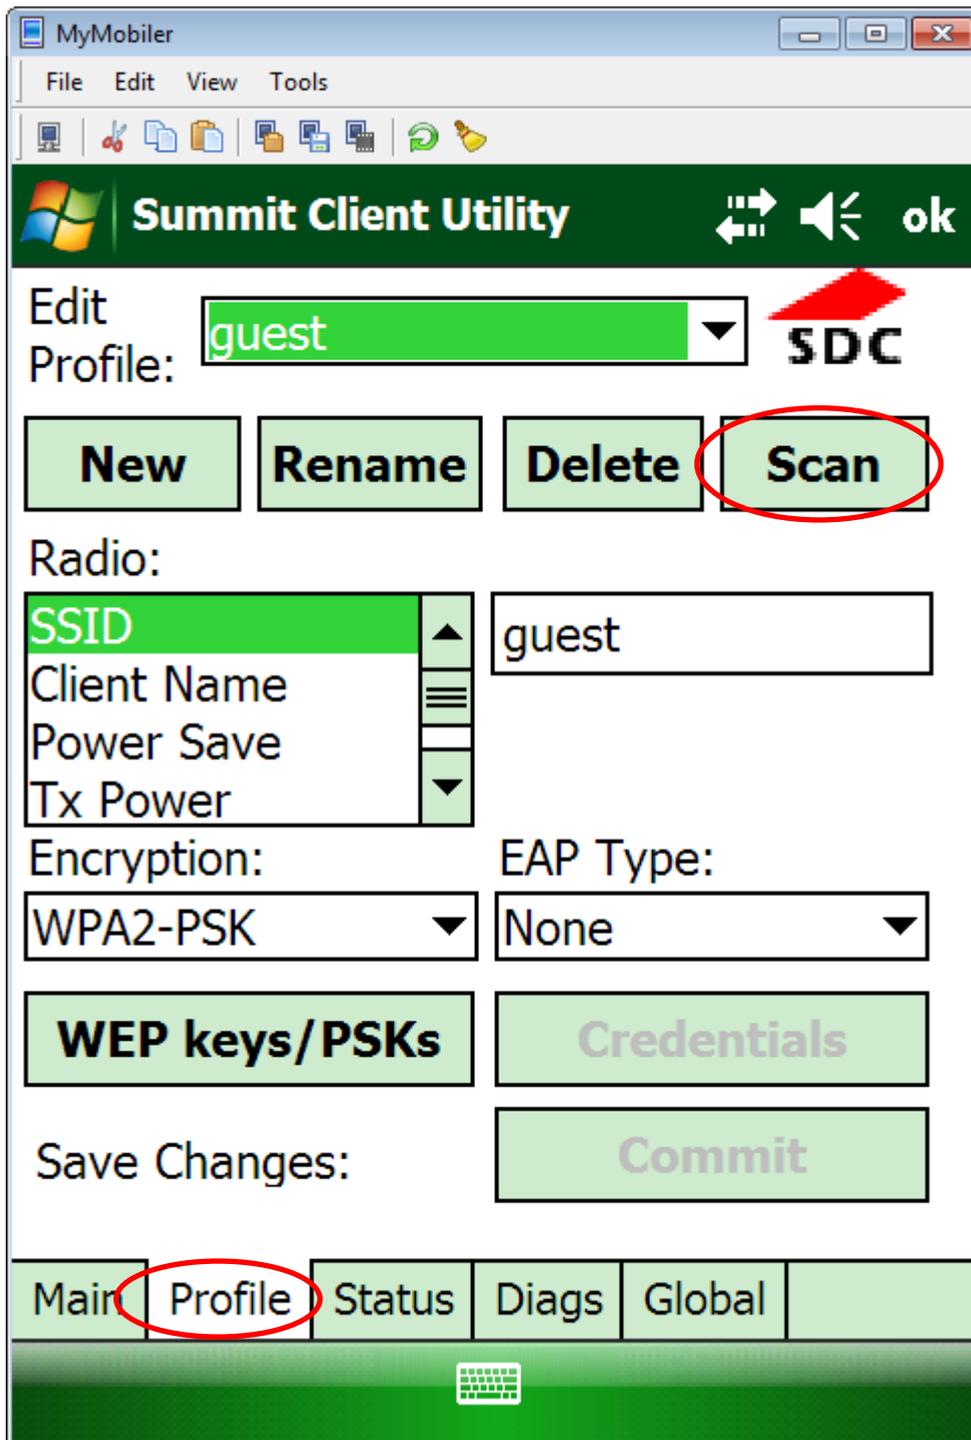


In the **Profile** tab, click on the **Scan** button

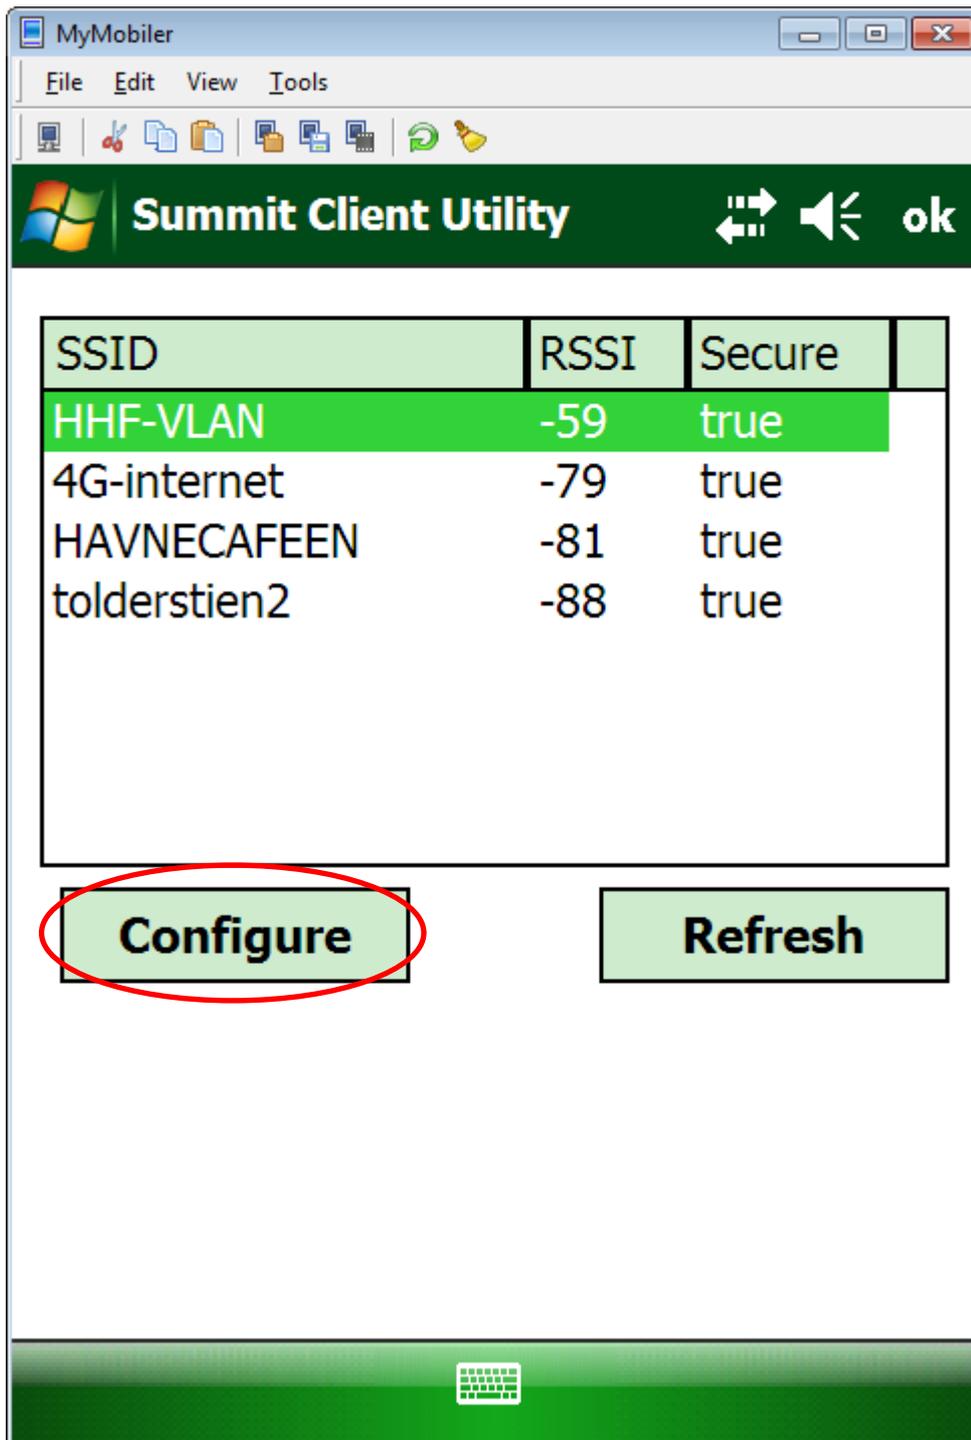


Select the WIFI network to be added and click on the **Configure** button

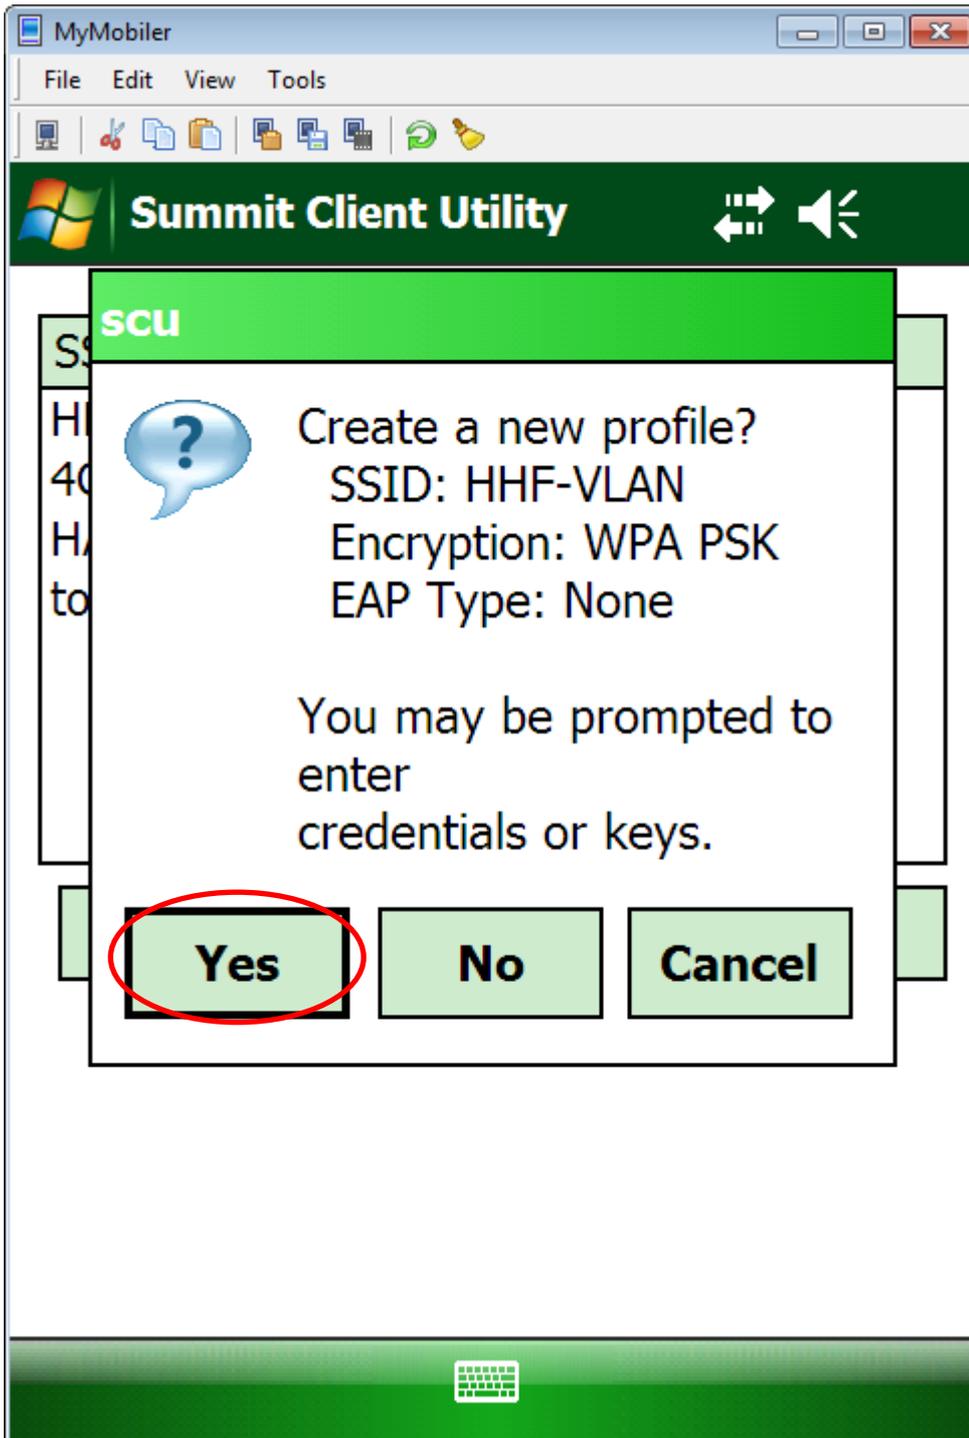


Click on the **Yes** button

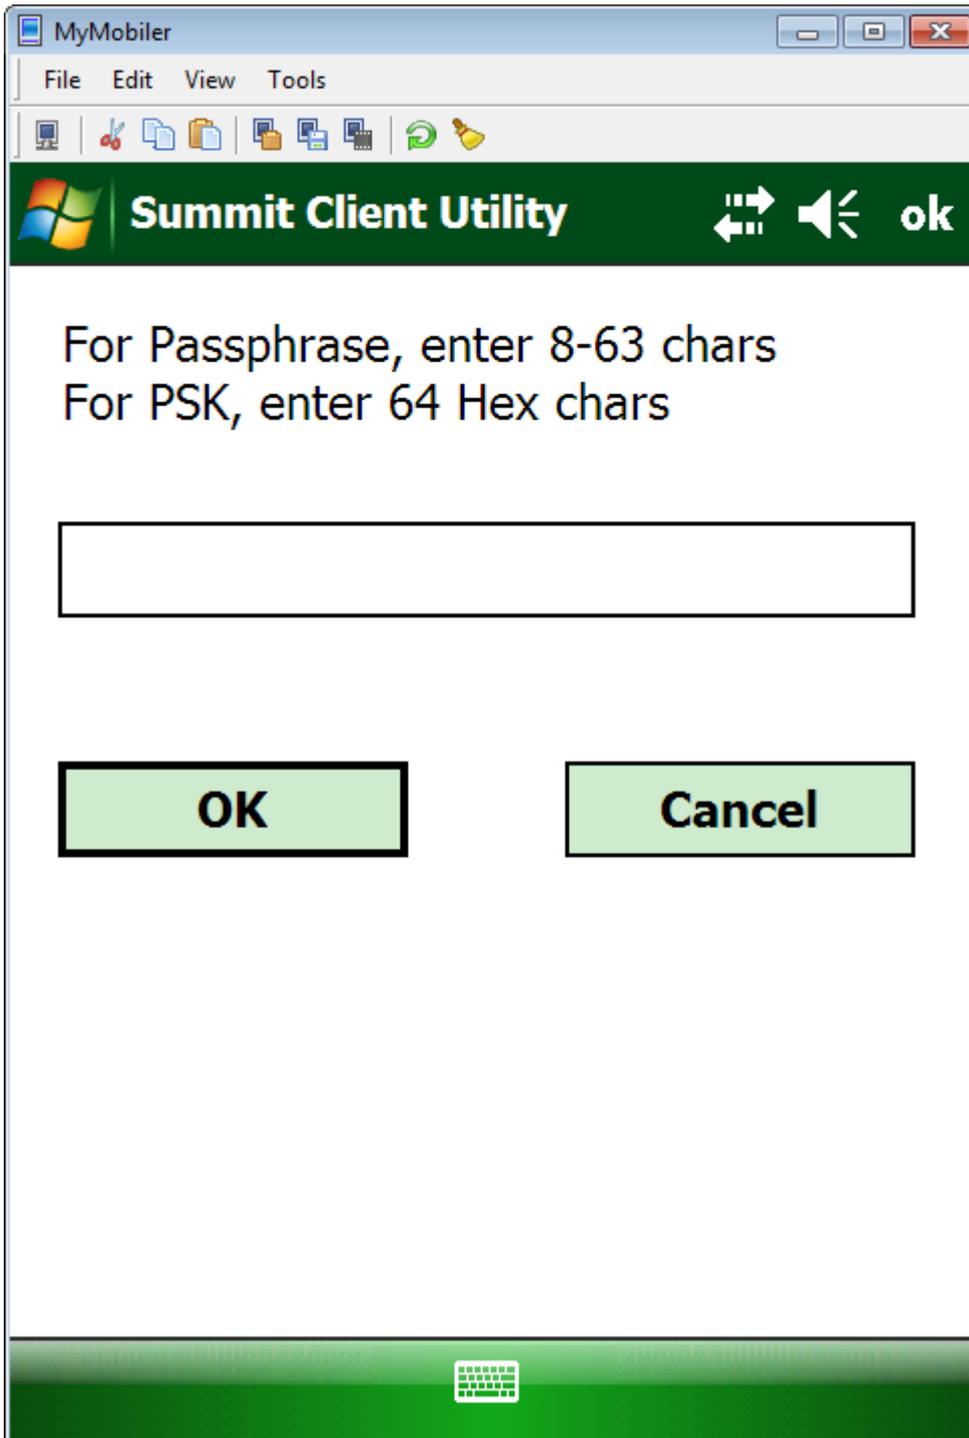


Enter password.

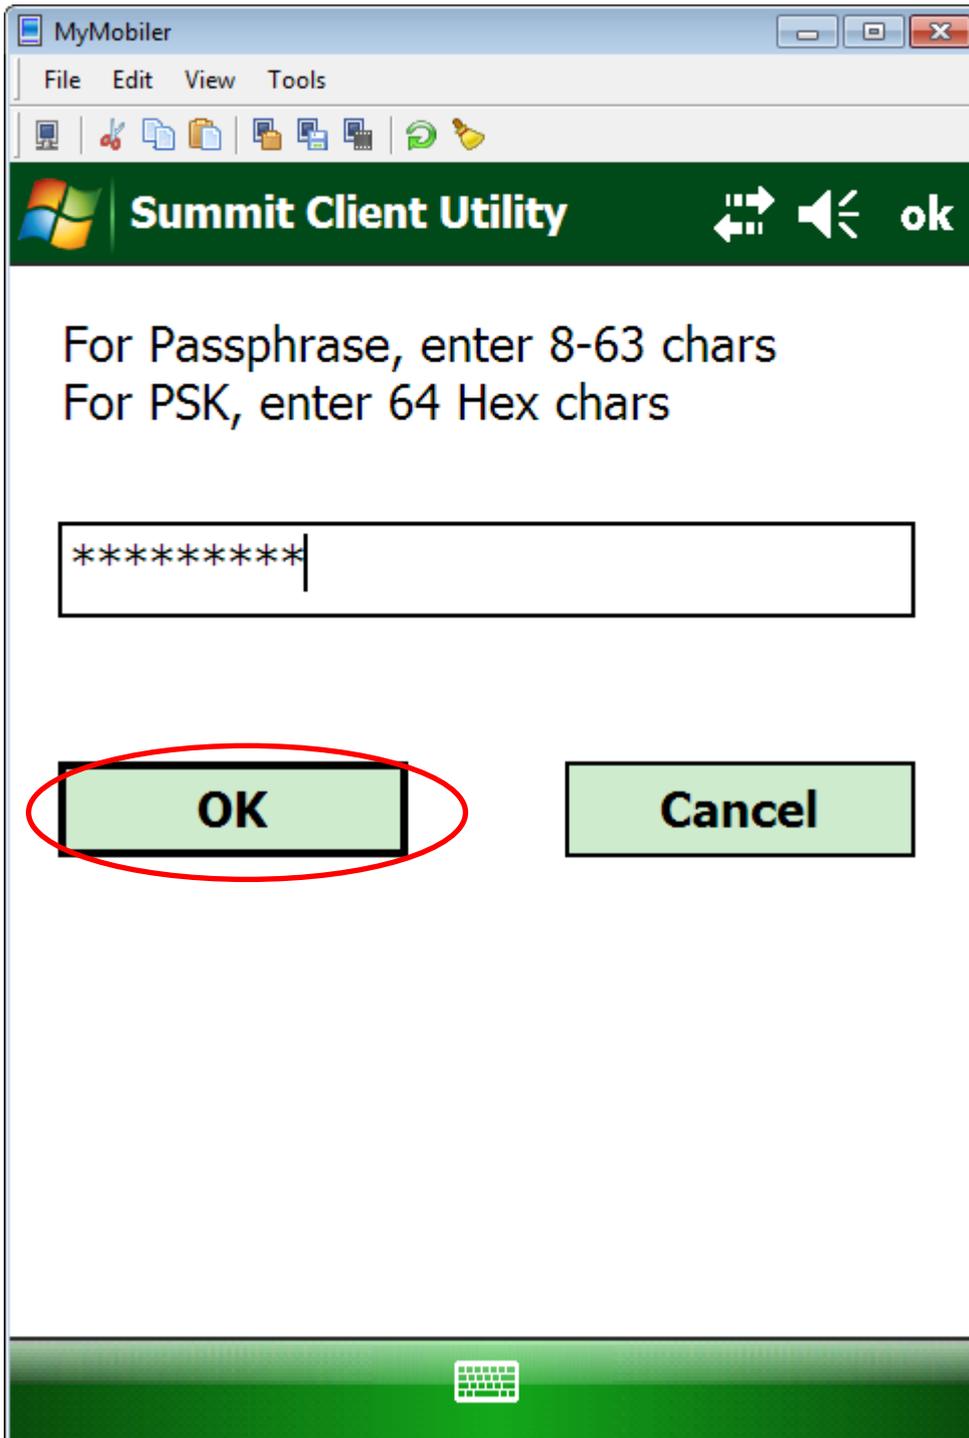


Click on the **OK** button

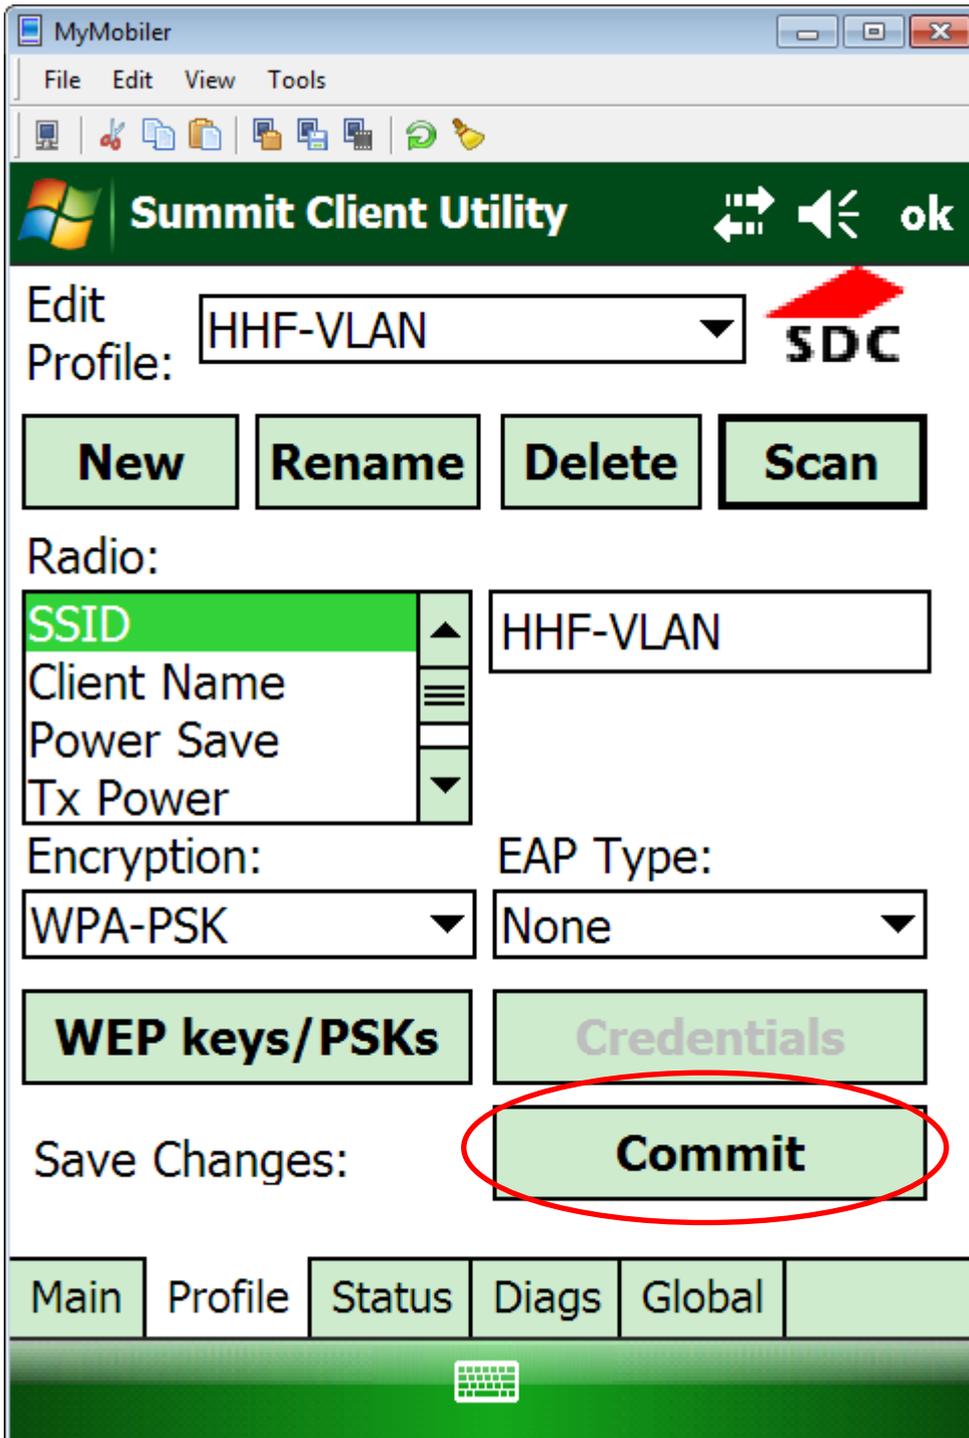

Save the profile by clicking the **Commit** button

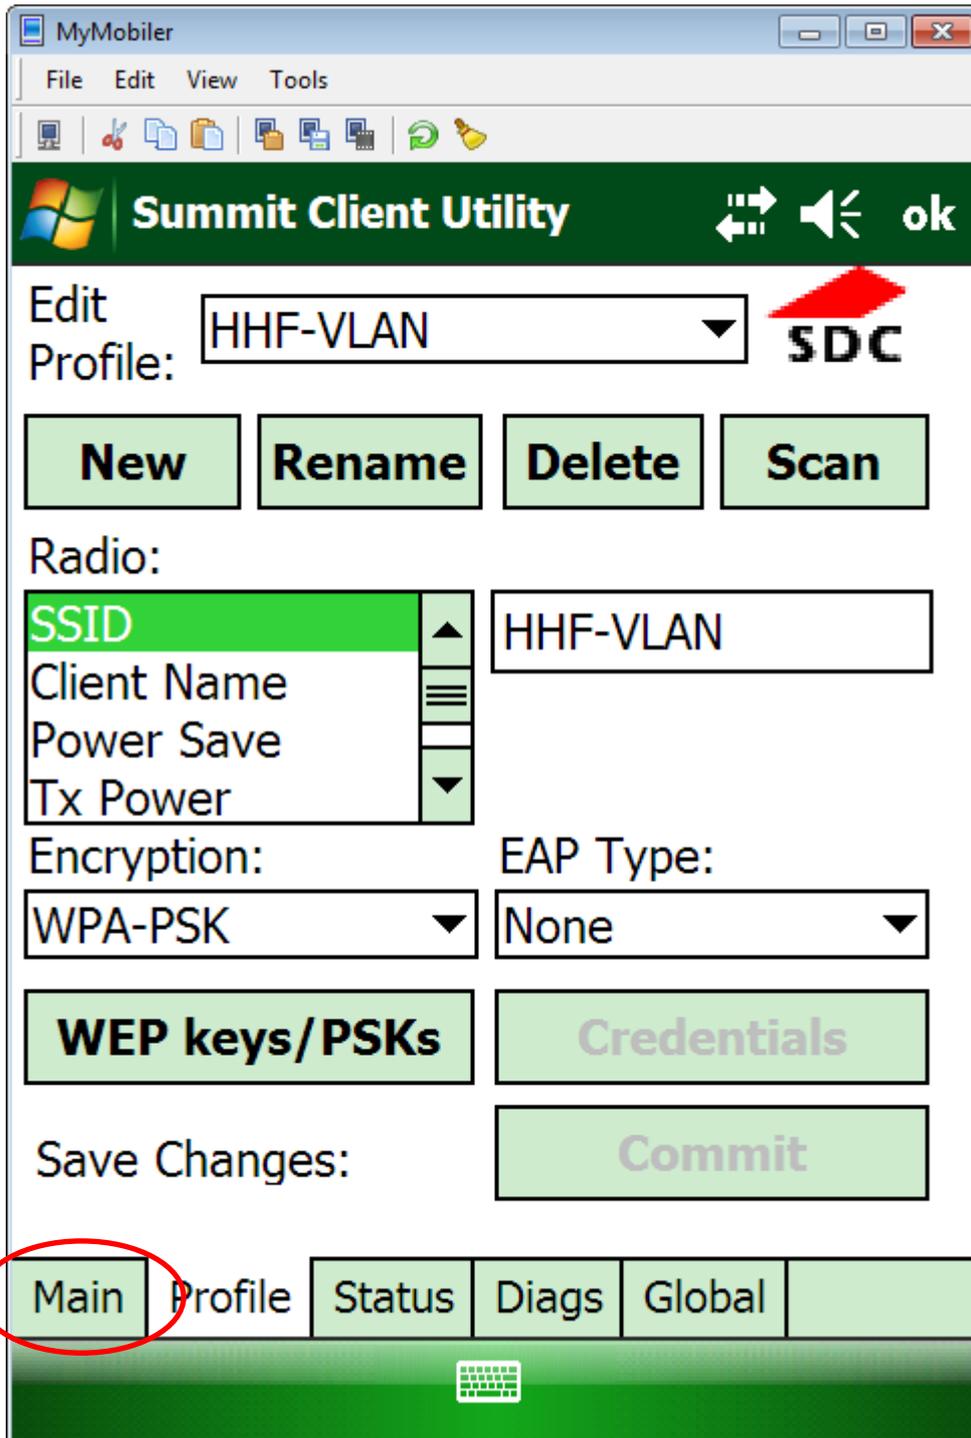


Select the **Main** tab

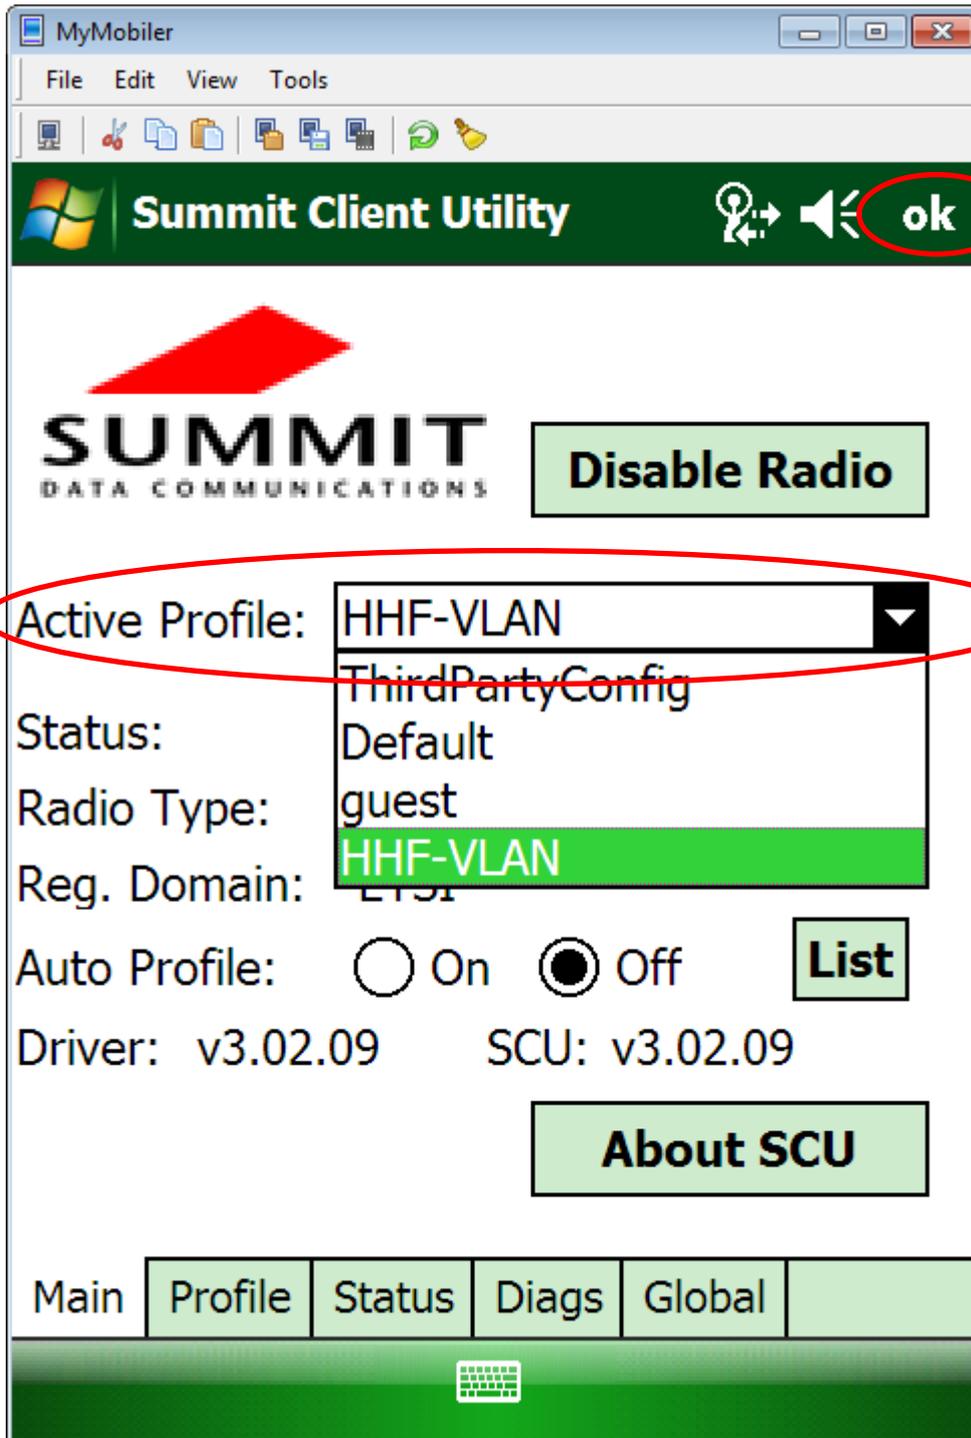

Select the new profile as **Active Profile**

In order to end the WIFI setup, click on the **OK** button in the upper left corner of the screen and restart the scanner

- **Pro2:** Pres and hold down the buttons **FN-Enter-FN** in about 5 seconds
- **Pro3:** Press and hold down the buttons **FN-F4-PowerOn/Off** in about 5 seconds

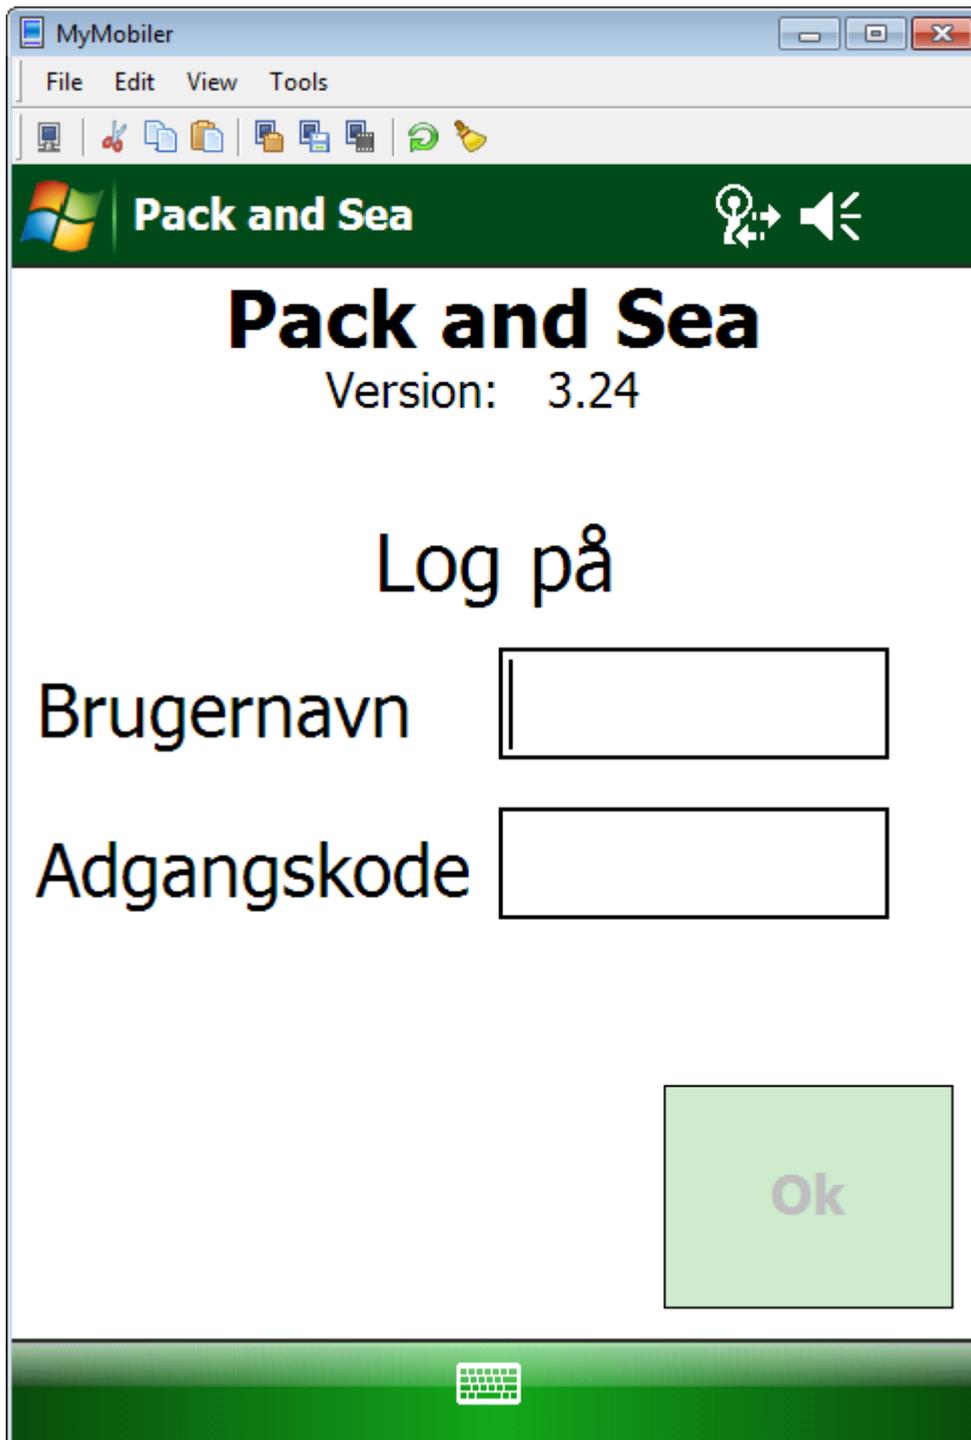

Enter **Username** and **Password** and then click **OK**